



ULTRA SEAT CORPORATION

Operational Guide for the Ultra E122

Weight Adjustment: While sitting in the seat the grey weight adjuster handle is located on the right side of the backrest. There are 3 different weight adjustments. Simply lift the handle all the way to the top for a small operator. Move the handle to the middle for a medium sized operator and all the way to the bottom for a heavy individual.

Back Angle Adjustment: The backrest can be set at any position that feels comfortable. To adjust the backrest turn the grey handle located on your right side between the back and seat cushion. Turn the handle clockwise to move the backrest forward and counter-clockwise to move the backrest backwards to a more reclined position.

Fore and Aft Adjustment: The seat has 11 different positions and 5" of travel. The handle for the fore and aft adjustment is located underneath the seat upper on the right-hand side. Simply pull the handle away from the seat (to the right) then push back or pull forward on the seat. The seat will then slide freely. To lock the seat into the position let go of the handle. Always test to make sure your seat is locked into place by slightly rocking the seat back and forth.

If your seat is equipped with any accessories: armrest, headrest and/or seat belt

Armrest Adjustment: The tip-up armrest will go straight up to make it easier for the operator to get in & out of the machine.

Seat Belt: Gently pull on the belt part of the seat belt. It's located on the left side of the seat under the armrest. The metal end then clicks into the other part of the seat belt on the right side of the seat. After the belt is inserted give the belt a little tug to ensure that it is clicked into place properly. To release the seat belt, push the red button on the seat belt that is attached to the right side of your seat.

18025 - 109 Ave, Edmonton, Alberta, Canada T5S 2R7
www.ultraseat.com