



ULTRA SEAT CORPORATION

## Operational Guide for the Ultra T722

- Weight Adjustment:** On the top-middle of your suspension you will find a round knob. This is your weight adjustment. Turn the grey handle out of the middle of the round knob and turn it clockwise. As you turn the handle the yellow indicator to the right of the round knob will select the capacity that the seat is set at: If you turn the round knob counter clockwise you will notice the yellow indicator will move in the opposite direction.
- Back Angle Adjustment:** The backrest can be set at any position that feels comfortable. To adjust the backrest lift upwards on the black handle (located on the right side of the seat cushion) while pushing or pulling on the backrest of the seat.
- Fore and Aft Adjustment:** This seat has 16 different fore and aft positions and approximately 6.5" of travel. The handle for the fore and aft adjustment is located underneath the suspension. Simply lift upwards on the grey handle, then push back or pull forward on the seat. It will slide freely. To lock the seat into position let go of the handle. Always test to make sure your seat is locked into place by slightly rocking the seat back and forth.

If your seat is equipped with any accessories: armrest, headrest and/or seat belt

- Armrest Adjustment:** To adjust the height use the roller adjuster found on the bottom of the armrest. Roll it to the left to go down and right to go up. The tip-up armrest will go straight up to make it easier for the operator to get in & out of the machine.
- Headrest Adjustment:** The headrest has 2 different adjustments; up, down, and forward or back. Firmly grip the headrest, then pull up or push down for your desired height. To adjust the tilt, firmly grip the headrest and pull it towards you or push it backwards.
- Seat Belt:** Gently pull on the belt part of the seat belt. It is located on the left side of the seat under the armrest. The metal end then clicks into the other part of the seat belt on the right side of the seat. After the belt is inserted give the belt a little tug to ensure that it is clicked into place properly. To release the seat belt, push the red button on the seat belt that is attached to the right side of your seat.