

CONVOY I

Operational Guide

APPLIES TO ALL CONVOY I MODELS

590100HB, 590102HB, 590103HB, 590100LB, 590102LB, 590103LB, 590100FL2, 590102FL2, 590103FL2, 590100FT, 590102FT, 590103FT, 590100TK, 590102TK, 590103TK.



SCAN FOR GUIDES




Guides also available at:
<https://www.ultraseat.com/downloads>

Manual Air Height Adjustable Memory

(Pull Lever UP ▲ to Raise & DOWN ▼ to Lower • Sets Memory Position - While Seated)



Lever ★ Sets Seat Memory Position

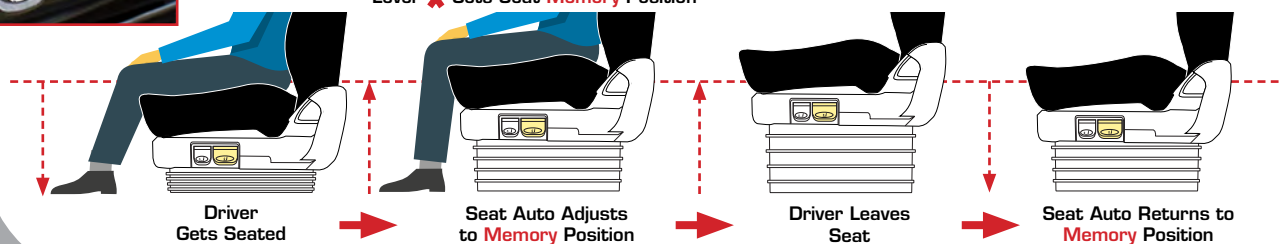

CONVOY II

Operational Guide

APPLIES TO ALL CONVOY II MODELS

590200HB, 590202HB, 590203HB, 590200LB, 590202LB, 590203LB, 590200FL2, 590202FL2, 590203FL2, 590200FT, 590202FT, 590203FT, 590200TK, 590202TK, 590203TK.



SCAN FOR GUIDES




Guides also available at:
<https://www.ultraseat.com/downloads>

Manual Air Height Adjustable Memory

(Pull Lever UP ▲ to Raise & DOWN ▼ to Lower • Sets Memory Position - While Seated)



Lever * Sets Seat **Memory** Position

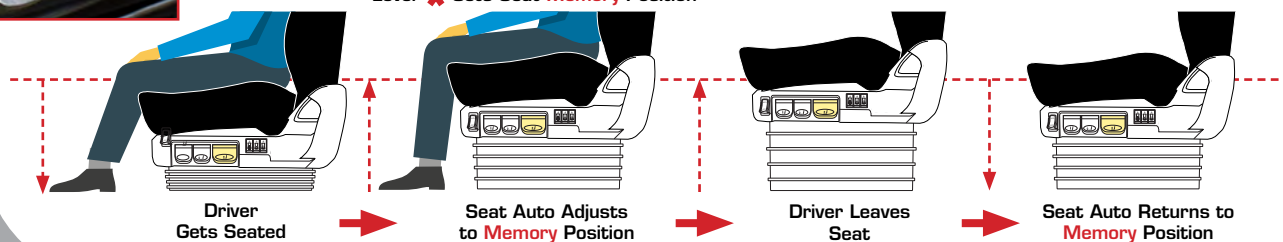

CONVOY III

Operational Guide

APPLIES TO ALL CONVOY III MODELS

590300HB, 590302HB, 590303HB, 590300LB, 590302LB,
590303LB, 590300FL2, 590302FL2, 590303FL2, 590300FT,
590302FT, 590303FT, 590300TK, 590302TK, 590303TK.



SCAN FOR GUIDES



Guides also available at:
<https://www.ultraseat.com/downloads>

Manual Air Height Adjustable Memory

(Pull Lever UP ▲ to Raise & DOWN ▼ to Lower • Sets Memory Position - While Seated)



Lever ★ Sets Seat Memory Position

