



Remove arms & headrest according to your seat instructions. If no arms are present, move to Step 3A.



Slide the headrest cover over your existing headrest, tuck in and secure the velcro tabs. Set aside while you install the back cover.



Pull lower portion of the back cover downaround the seat cushion ensuring the elastic is fully under the seat cushion and not sitting on the edge.

Place the unturned portion of the cover over the top of the upper area of your seat back and start rolling/pulling it down over your seat. Making sure to adjust and align your seams along the way.

SCAN FOR GUIDES



 
Guides also available at: https://www.ultraseat.com/downloads

#350101CK #350106CK #350131CK




On the front portion of the back cover push the velcro strip through the gap between back of the seat and seat cushion. Pull tight and secure velcro edges together.





 Slip the seat cover over your seat cushion. Push the back of the cover with the elastic cord loops through the gap between the back of the seat and seat cushion.



SCAN FOR GUIDES



Guides also available at: https://www.ultraseat.com/downloads

#350101CK #350106CK #350131CK Note: If you find the lower portion of your seat cover loose after installation you may need to tighten the elastic cord with the "S" hooks. To do this, untie the knot that holds the "S" hook in place and slide further down the cord and re-tie the knot.