

**MODEL T876 VRT
IN A
VOLVO ROCK
TRUCK
WITH SAFETY SWITCH**

UPDATED: 03/09/19



Phone: 1-800-667-7328
Fax: 1-888-667-7328
www.ultraseat.com

**MODEL T876 VRT
IN A
VOLVO ROCK TRUCK
WITH SAFETY SWITCH**

INSTALLATION GUIDE



ULTRA SEAT CORPORATION



**Product in photo(s) may be different then purchased product,
For additional photos and information please visit
www.ultraseat.com*

15001601

1

Take the seat belt and wire harness off the original seat.

2




Cut the wire harness and label the wires as follows: Black wires are the seat switch, Red wire is the seat heater (not to be reused), White, Purple and Yellow are seat belt wires.

3

Install the original seat belt on the new seat.

4

Put the wires from the seat belt and from the new seat switch through the hole in the suspension cover.

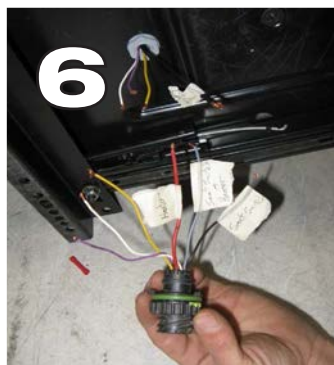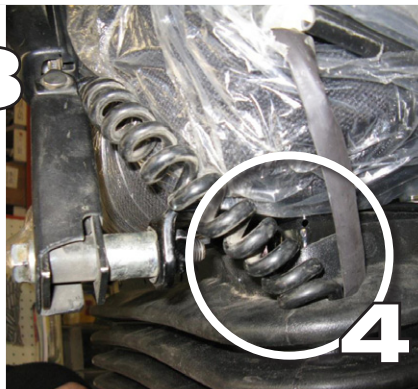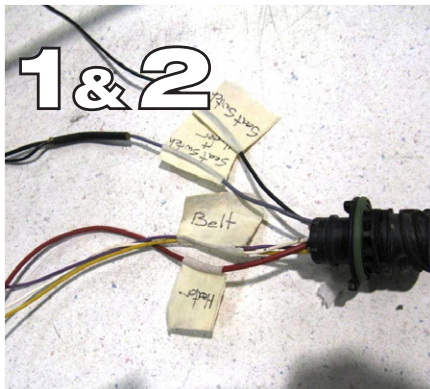

5

Feed the wires through the plastic plug in the bottom of the suspension.

6

Connect the wires to the original plug (not the red wire).

7

Connect the plastic plug to the machine making sure there is enough slack for the seat to move fore and aft.

Please visit www.ultraseat.com for more information regarding this product.

MODEL T876 VRT IN A VOLVO TRUCK INSTALLATION GUIDE