






INTERNATIONAL ADAPTER INSTALLATION GUIDE

APPLIES TO
**CONVOY INTERNATIONAL
ADAPTER**



| 1. 3/8" x 1" BOLT (X4) | 2. 3/8" FLAT WASHER (X8) | 3. 3/8" NYLOCK WASHER (X4) |
|--|--|--|
|  |  |  |

HIGH BASE SHOWN, LOW BASE HOLES ARE IDENTICAL

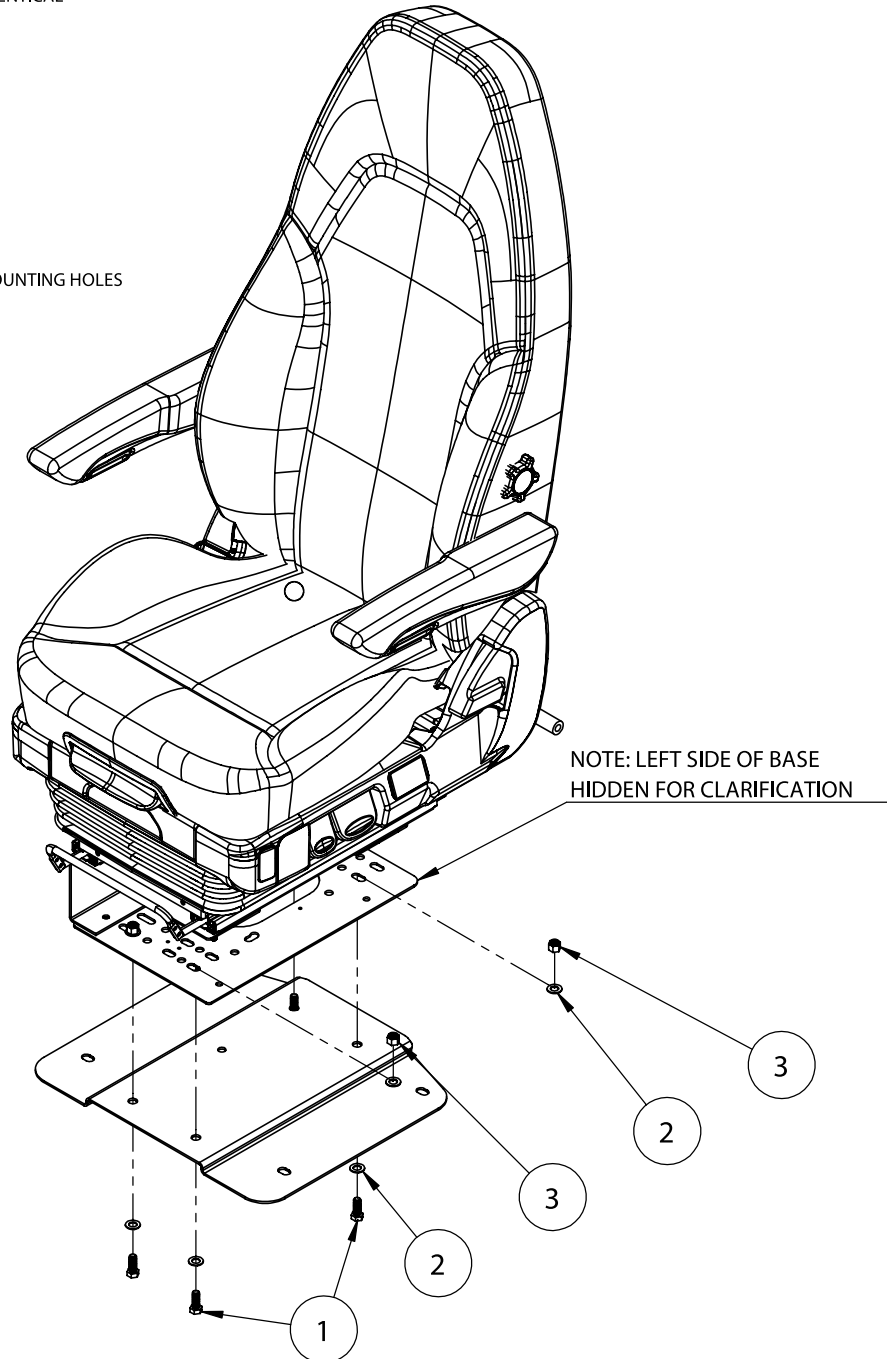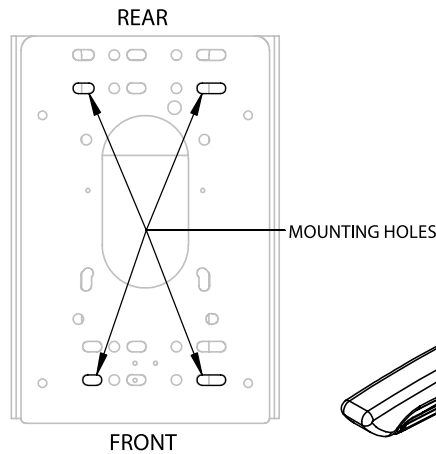

SCAN FOR
GUIDES



Guides also available at:
<https://www.ultraseat.com/downloads>

15002208