


EXCAVATOR BASE HOLE PATTERN

T773 JD1 & T776C JD1

Bottom Mounting Pattern

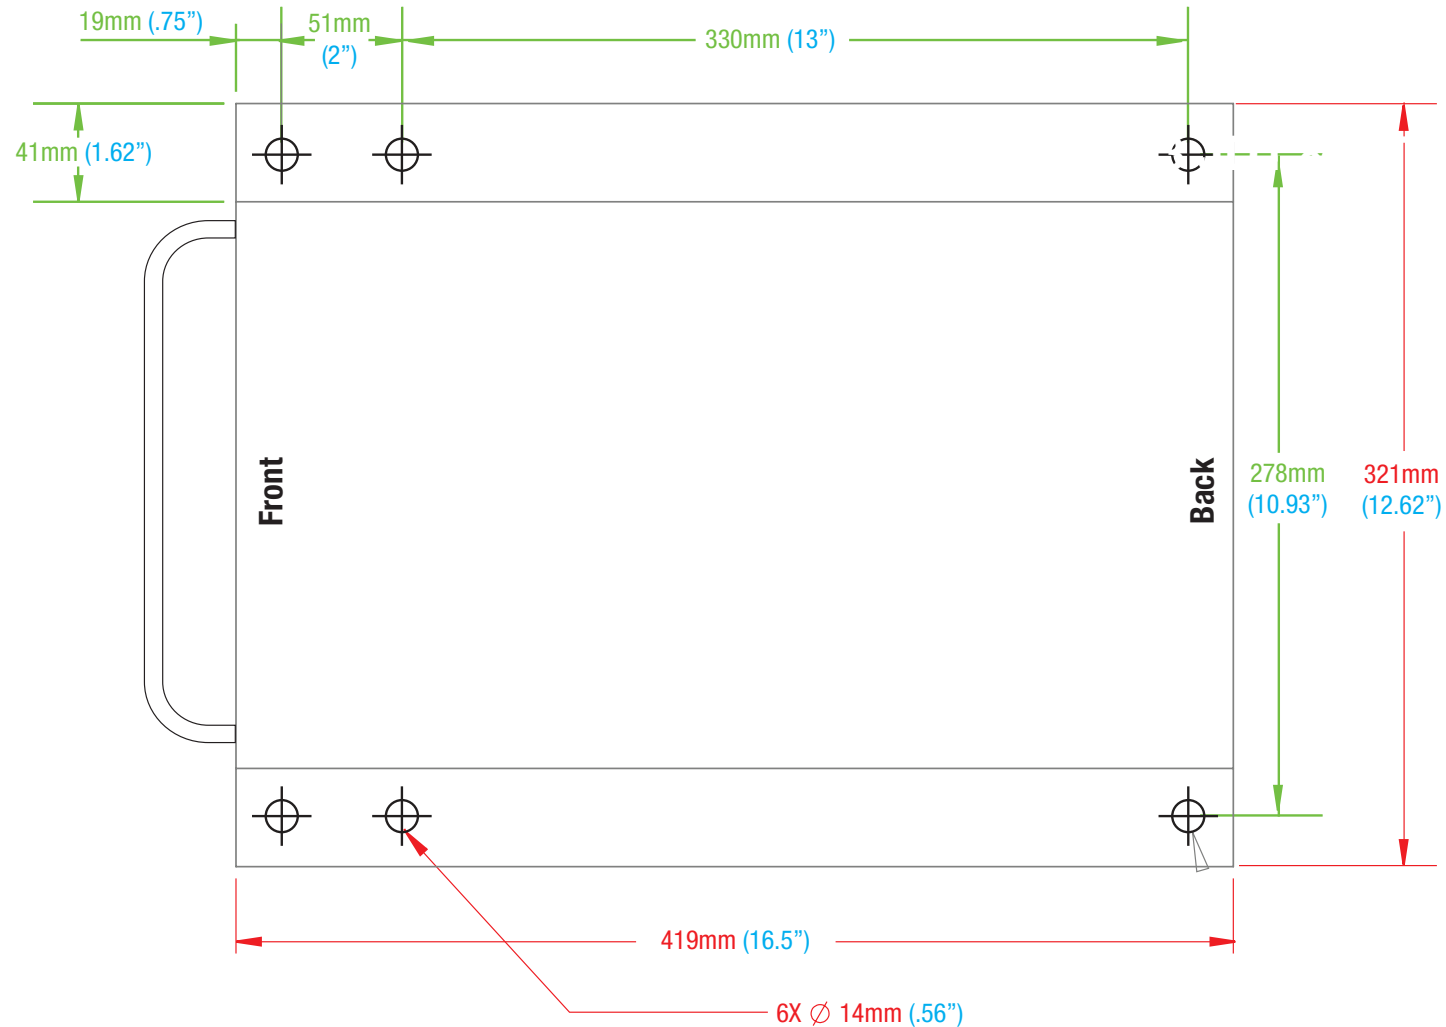

* Mounting Pattern Dimensions

* Measurements in Inches

* Overall Dimensions

PHONE: 1-800-667-7328 • FAX: 1-888-667-7328

ULTRASEAT.COM



ULTRA SEAT CORPORATION