


SUSPENSION BASE HOLE PATTERN

S022 & S025C

Bottom Mounting Pattern

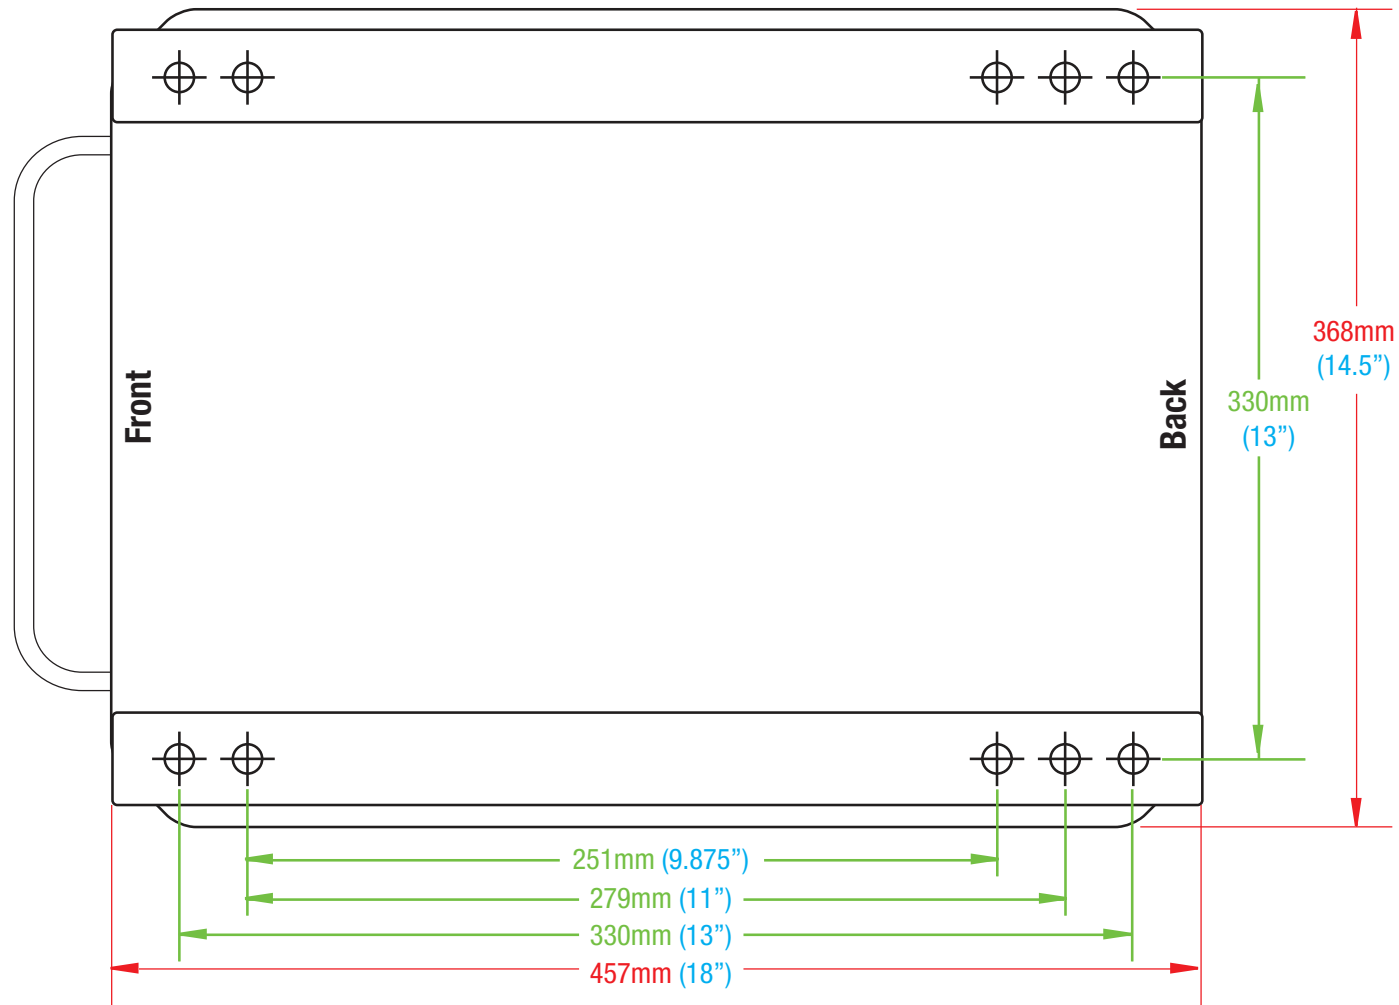

ULTRA SEAT CORPORATION

* Mounting Pattern Dimensions

* Measurements in Inches


* Overall Dimensions

PHONE: 1-800-667-7328 • FAX: 1-888-667-7328

ULTRASEAT.COM

SUSPENSION BASE HOLE PATTERN

S022 & S025C

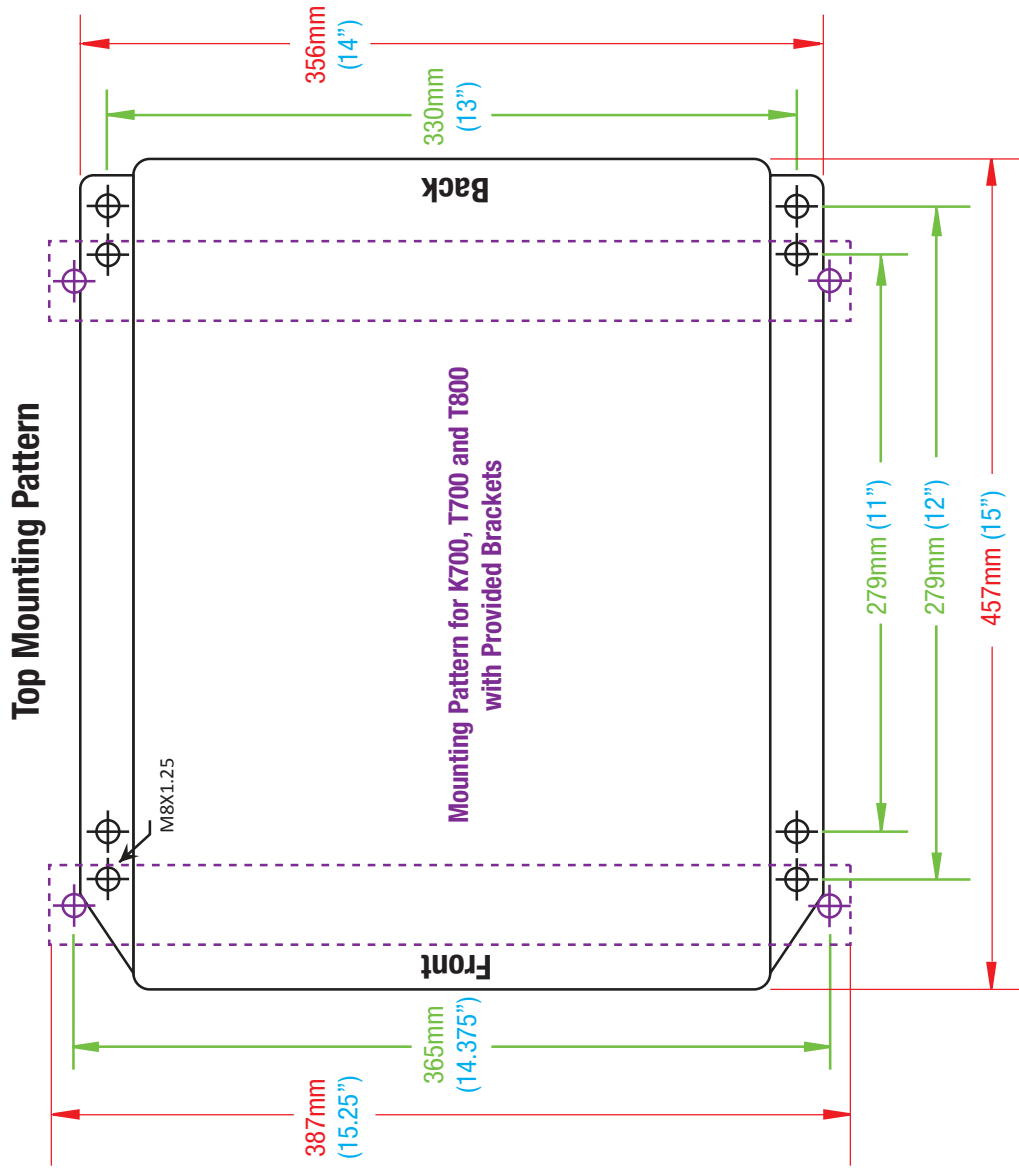

* Mounting Pattern Dimensions
* Measurements in Inches
* Overall Dimensions



PHONE: 1-800-667-7328 • FAX: 1-888-667-7328
ULTRASEAT.COM